
A CAUTION

Turn off furnace/air conditioner blower before servicing. This media is not to be used in the Model 5000 Electronic Air Cleaner.





Step 3: Place inner assembly on flat surface so pleat spacers are visible (See Figure 2).






Figure 1

Step 4: Open both end panels by pressing buttons labeled "PRESS TO OPEN" (**See Figure 2**).

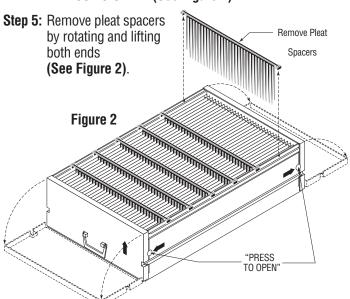


Step 6: Open both hinged flaps by lifting along entire edge labeled "LIFT HERE" **(See Figure 3)**.

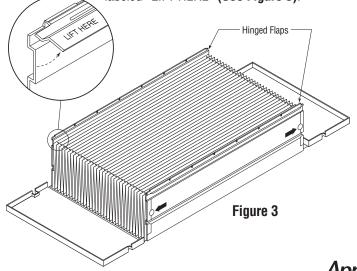

Step 7: Lift media from inner assembly and discard media.


Step 8: Place one cardboard edge of new media over the hooks on the inner housing and through the slots in the cardboard (See Figure 4).



Step 9: Expand media and place the other cardboard edge over the opposite hooks.

Step 10: Close hinged flaps by snapping them in place.

Step 11: With media pleats evenly spaced, rest first pleat spacer on yarn at either end, then carefully insert one

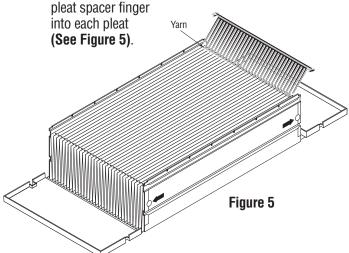

Step 12: Position pleat spacer to align with notches on inner assembly. Use first pleat spacer as a guide for inserting remaining pleat spacers.

Step 13: Snap pleat spacers down into the inner assembly.

Step 14: Close end panels by folding up and snapping into place.

Step 15: Slide inner assembly in outer housing.

Step 16: Replace door.

Step 17: Return power to furnace/air conditioner.